

# LG 2g Total Unlock Clip

## LG Unlock Guide

Operations Manual V1.20  
2<sup>nd</sup> February 2007

LG 2g GSM phones are grouped into 3 separate groups for unlocking  
Each Group as it's own mode or stage on the clip

Each Stage is indicated by a slow alternating pattern between LEDs 1 & 2

A change between modes or stages is indicated by a Fast Rapid Alternating pattern between LEDs 1 & 2, then a pause.

### Operating Instructions

1. Connect phone powered off
2. Add power to clip
3. Wait for correct Stage/Mode, then press "power" button on phone
4. Keep phone power button held until 2 solid LEDs on clip.
5. A factory reset maybe required to finish unlock

### Factory Reset

If the phone is still locked then power on phone and enter 2945##\*# select factory reset

### Phone Groups

Stage 1 Group 1	Stage 2 Group 2	Stage 3 Group 3	Stage 4 Group 4
LG-CG225 LG-C1500 LG-L1200 LG-C1200 LG-F7200 LG-MG200 LG-L342i LG-C1400 LG-Cg300 LG-M6100 LG-L341 LG-G510 LG-F1200 LG-MG105 LG-F2400 LG-G1500 LG-Kg810 LG-A7110 LG-B2100 LG-G1600 LG-Mg810 LG-A7150 LG-C2100 LG-W3000 LG-Mg530 LG-B2070 LG-C3320 LG-GW3100 LG-MG155 LG-B2150 LG-F2100 LG-C3100 LG-KG800 LG-B2250 LG-F2300 LG-G4010 LG-KG320 LG-C1150 LG-F7250 LG-G4050 LG-ME591 LG-C1300i LG-C3300 LG-GW5200 LG-G7120 LG1300i LG-C3310 LG-GW5220 LG-F2250 LG-C3380 LG-C3400 LG-GW5300 LG-F3000 LG-L1400 LG-B2000 LG-GW5310 LG-MG100 LG-F9100 LG-B2050 LG-GW5400 LG-ME500 LG-M4410 LG-L5100 LG-G5500 LG-KG210 LG-MG191 LG-L3100 LG-G7000 LG-KG225 LG-P7200 LG-C2200 LG-G7020 LG-KG220 LG-S5000 LG-L1100 LG-G7030 LG-CE500 LG-S5200 LG-B1200 LG-G7050 LG-MG105 LG-F2200 LG-B1300 LG-G7070 LG-M6100 LG-G7200 LG-C1100 LG-G7100 LG-G7120	C1300 C2000 F7250 F9100 G4010 G7020 G4011 G4020 G4050 G5500 G7000 G7030 G7050 L1100 L1400 L5100 T5100	Ce500 LG7110 VX5200 C2000 C1500 AX5000	KG220

There is also 2 extra stages as aback ups for the following:-

Stage 5:- CE500

Stage 6:- KG800 Choco